

# Remsafe Venlock

## Sliding aluminium window restrictor



- ✓ Suitable for sliding aluminium windows
- ✓ Easy 30-second DIY installation
- ✓ Manufactured to ISO 9001 standard
- ✓ Complies with Australian, U.S and U.K. standards
- ✓ Tested to withstand a horizontal force of 1700N (173 kg)

### The Remsafe Venlock is supplied with:


- 1 x Drilling Jig
- 2 x Keys
- 1 x Packing Plate
- 2 x Extended Screws

### Installation:

1. With the window in the closed position, place the drilling jig over the window sill at your desired ventilation position (Picture 1), **Maximum opening should not exceed 12.5cm at any point on the window.**
2. Mark drilling jig hole with sharp pencil. Note: Check jig for FRONT
3. Drill hole using a 6.5mm or ¼ inch drill piece.
4. Place Remsafe Venlock over sill and push to lock (Picture 2)
5. For thicker window sills use packing plate and extended screws provided.
6. For added security the Remsafe Venlock can be installed up against the window frame in the closed position.

### Maintenance:

The manufacturer recommends maintenance is carried out on the Remsafe Venlock by a licensed tradesman every six months. Consideration must be given to the local environment and maintenance carried out accordingly. Faulty locks should be replaced immediately.

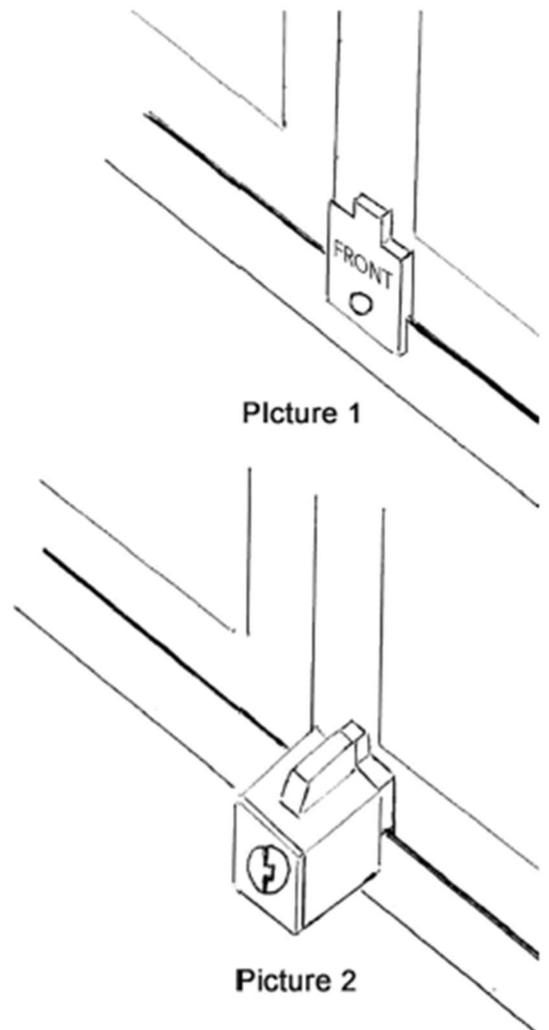

**NEVER LEAVE THE KEY UNATTENDED IN THE LOCK**

Remsafe Window Locks offer safety solutions for all window types.

Contact us for orders and enquiries on +61 2 9453 5625, email [info@remsafewindowlocks.com.au](mailto:info@remsafewindowlocks.com.au)  
or visit [www.remsafewindowlocks.com.au](http://www.remsafewindowlocks.com.au)